

FLINT AERO

FAA Approved Airplane Flight Manual Supplement

to

Cessna Models: 172, 172A, 172B, 172C, 172D, 172E, 172F,
172G, 172H, 172I, 172K, 172L, 172M, 172N, 172P, 172Q,
* F172F, F172G, F172H, F172K, F172L, F172M, F172N,
* FR172E, FR172F, FR172G, FR172H, FR172J, FR172K
175, 175A, 175B, 175C, R172K, 172RG

* Reims Aviation S.A. Cessna Models.

The information in this document is FAA approved material which, together with the Basic AFM is applicable and must be carried in the basic manual when the airplane is modified by the installation of auxiliary fuel system in accordance with STC SA1614WE.


The information in this document supersedes the basic manual only where covered in the items contained herein. For Limitations, Procedures, and Performance not contained in this supplement, consult the manual proper.

Limitations: Placard at Each Selector Valve:
Auxiliary must be OFF during take-off,
landing, filling, and when auxiliary
is empty. Do not use auxiliary until
main is approximately one-half empty.
Utility operation prohibited with fuel
in auxiliary tanks.

Procedures: No change.

Performance: No change.

FAA APPROVED

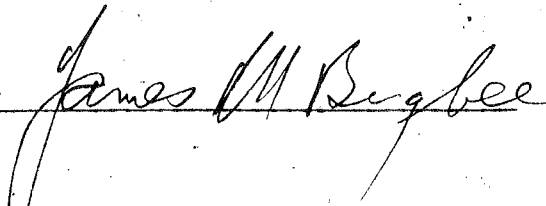

DATE

March 14, 1983